 


EXAMPLE

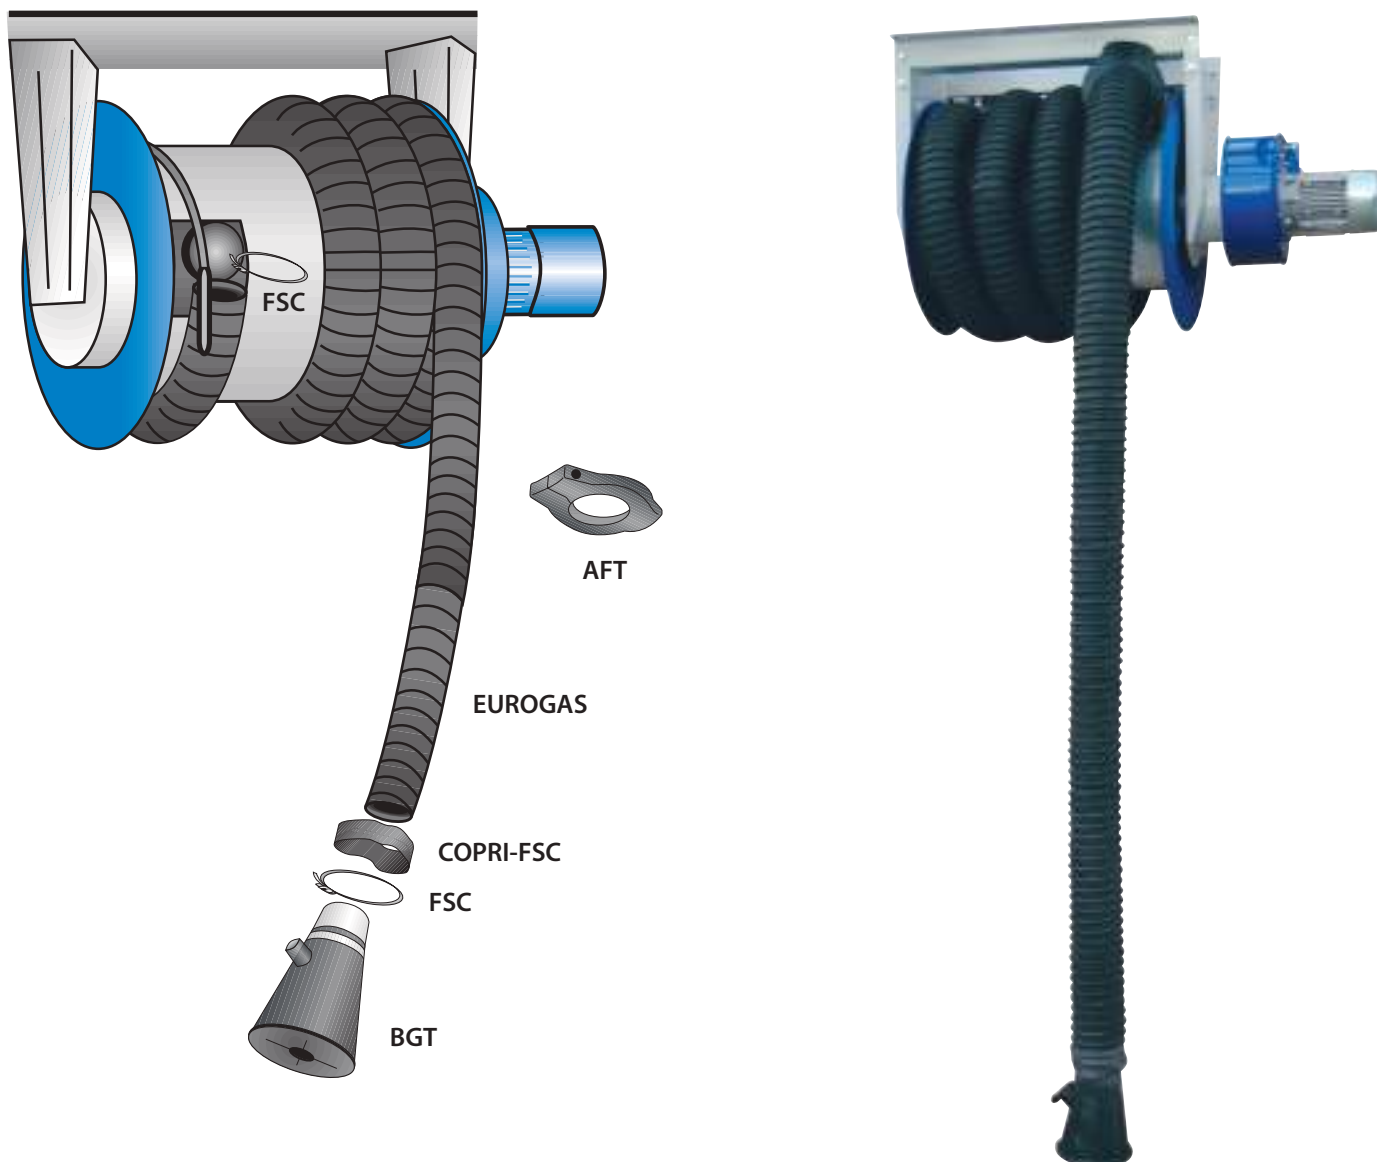

APPLICATION RESUME										
						MICRO START	MICRO CTRL			
AR	✓	✓				✓		✓	✓	
ARA	✓	✓					✓			✓
ARC		✓	✓			✓		✓	✓	
ARCA		✓	✓				✓			✓
AC			✓	✓		✓		✓	✓	
ACA			✓	✓			✓			✓
AC-MAXI				✓	✓	✓		✓	✓	
ACA-MAXI				✓	✓		✓			✓

AFT



AFT-75	Ø 75 mm	Ø 3"
AFT-100	Ø 100 mm	Ø 4"
AFT-125	Ø 125 mm	Ø 5"
AFT-150	Ø 150 mm	Ø 6"



AFT-200	Ø 200 mm	Ø 8"
---------	----------	------

Per tubazioni, fsc, copri fsc, bocchette vedi pg. 42 - For pipes, fsc, fsc covers, vents see pg. 42 - Pour les tuyaux, FSC, couvertures FSC, évents voir p. 42 - Bei Röhren, FSC, FSC Abdeckungen, Lüfter siehe Seite. 42 - Paratuberías, fsc, cubiertas fsc, respiraderos ver pg. 42.


OPTIONAL

SERR



AR75-SERR
AR100-SERR
AC-SERR (AC-AM-MAXI)

 Serranda automatica per arrotolatori - Automatic closing valve for reels
- Clapet automatique pour enrouleur - Automatische absperklappe für aufrollen - Tapa de cierre automática de la aspiración para los enrolladores.

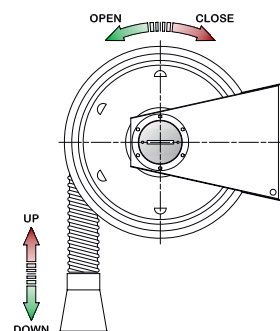

MICRO-CTRL



Microinterruttore con quadro elettrico per partenza e arresto automatico del ventilatore accoppiato - Microswitch electrical panel for starting and stopping automatic fan coupled
- Panneau électrique Microswitch pour démarrer et arrêter automatique du ventilateur couplé - Mikroschalttafel zum Starten und Stoppen automatische Lüfter gekoppelt
- Cuadro eléctrico Microinterruptor para arrancar y parar el ventilador automático acoplado.

MICRO-START



Microinterruttore per partenza e arresto automatico del ventilatore centralizzato (prevedere QE-AC) - Microswitch for starting and stopping automatic fan centralized (predict QE-AC) - Microswitch pour démarrer et arrêter ventilateur automatique centralisé (prévoir QE-AC) - Mikroschalter zum Ein- und Ausschalten automatische Lüfter zentralisiert (vorher QE-AC) - Microswitch para arrancar y parar el ventilador automático centralizado (predecir QE-AC).

QE-AC vedi pg. 102
QE-AC see pg. 102
QE-AC voir p. 102
QE-AC siehe seite. 102
QE-AC ver pg. 102

MICRO-TX

 


Microswitch di partenza automatica dell'aspiratore con comando via radio (senza fili). Da accoppiare al quadro elettrico QE-AC/RX - Microswitch for wireless automatic start and stop of the fan via radio frequency. to be combined with main switchboard QE-AC/RX - Système de démarrage automatique du ventilateur en radiofréquence (sans cables). A proposer avec le coffret QE-AC/RX - Automatisch Einschaltungssystem per Fernfunk (Kabellos). Zu verbinden mit Steuerung modell QE-AC/RX - Sistema de arranque automatico del aspirador por radio-frecuencia (sin cables). A conectar con el cuadro QE-AC/RX.

QE-AC/RX vedi pg. 89
QE-AC/RX see pg. 89
QE-AC/RX voir p. 89
QE-AC/RX siehe seite. 89
QE-AC/RX ver pg. 89

AC-FD / AR-FD

Freno dinamico di rallentamento risalita tubo - Dynamic brake deceleration lift tube - Frein dynamique tube de décélération de levage - Dynamische Bremsverzögerung Hubschlauch - Freno dinámico tubo elevador desaceleración.

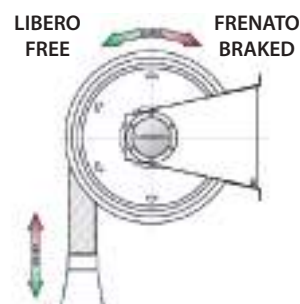

INT



QE-AC1 / QE-AC2



QE-AC/RX



Per informazioni sugli interruttori e i quadri vedi pg. 102
For information on switches and managers see pg. 102
Pour plus d'informations sur commutateurs et les gestionnaires voir p. 102
Informationen zu Schalter und Manager siehe seite. 102
Para obtener información sobre los interruptores y gerentes ver pg. 102

ESEMPIO IMPIANTO CON MICRO-START - EXAMPLE SYSTEM WITH MICRO-START - EXEMPLE DE SYSTÈME DE MICRO-START - BEISPIEL-SYSTEM MIT MICRO-START - SISTEMA DE EJEMPLO CON MICRO-START

